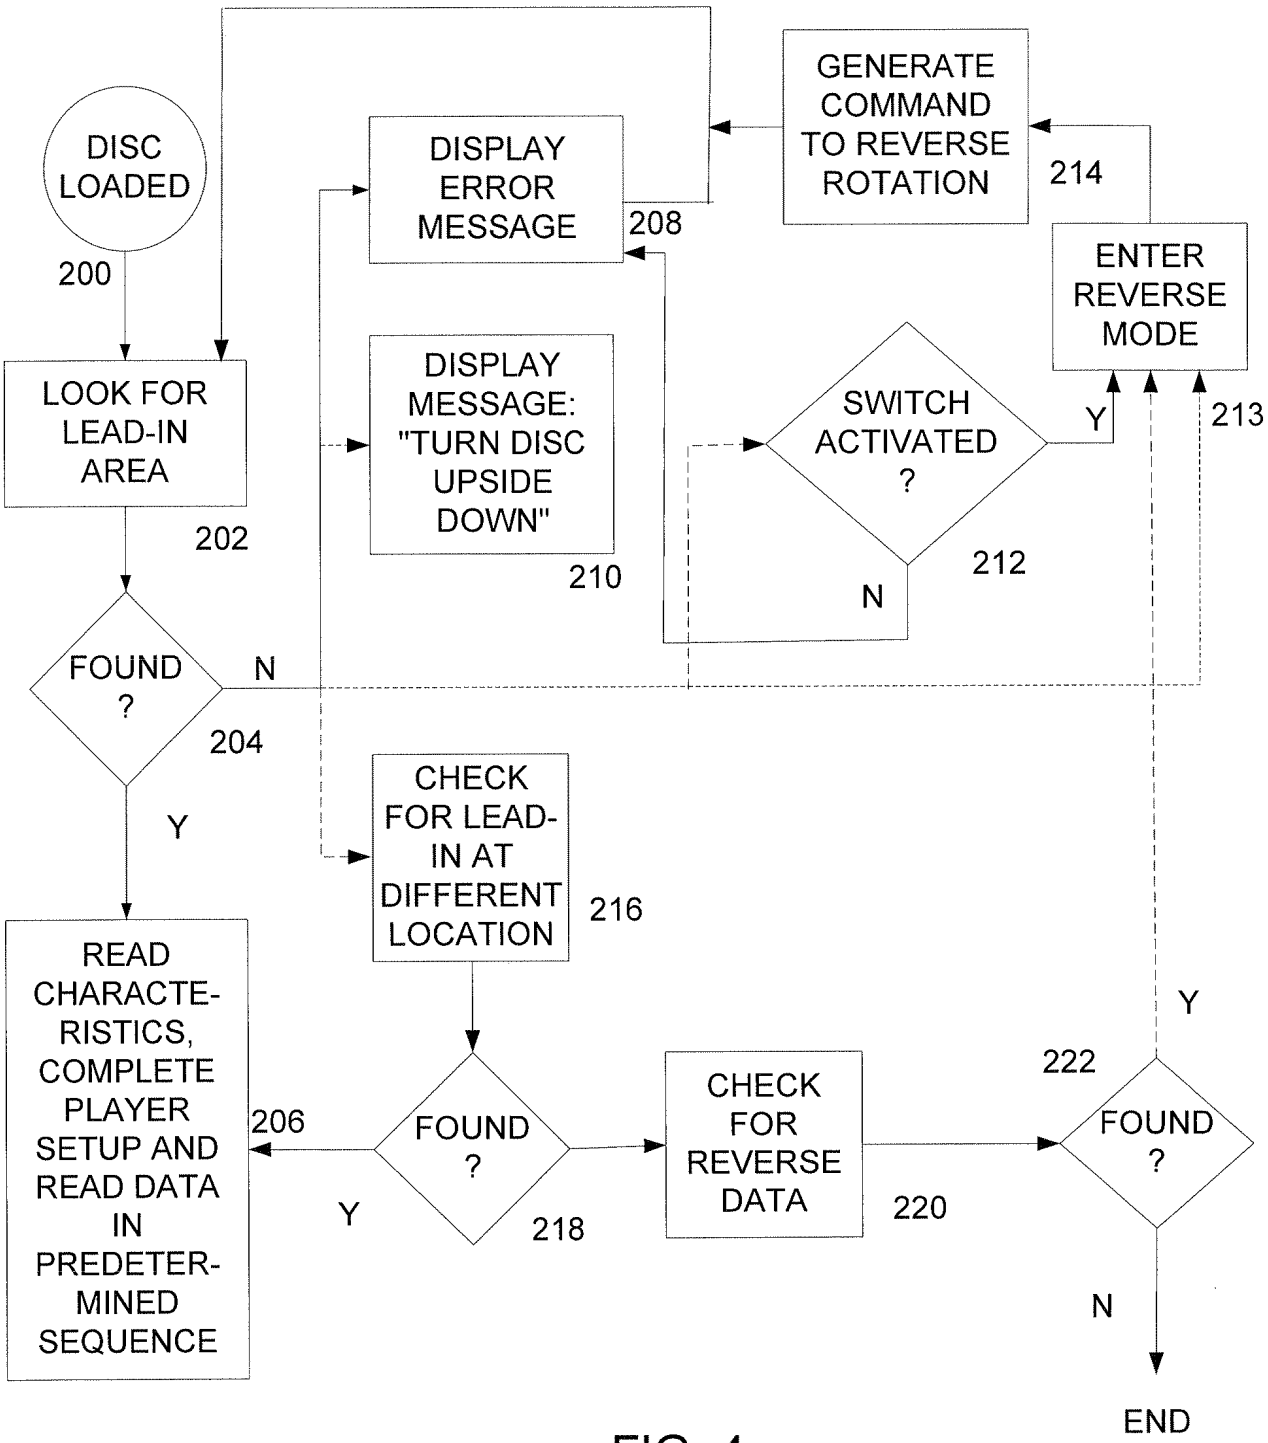
DISC LOADED
200
LOOK FOR LEAD-IN AREA
202
FOUND ?
204
N
Y
READ CHARACTE-RISTICS, COMPLETE PLAYER SETUP AND READ DATA IN PREDETER-MINED SEQUENCE
206
DISPLAY ERROR MESSAGE
208
DISPLAY MESSAGE: "TURN DISC UPSIDE DOWN"
210
SWITCH ACTIVATED ?
212
Y
N
GENERATE COMMAND TO REVERSE ROTATION
214
ENTER REVERSE MODE
213
CHECK FOR LEAD-IN AT DIFFERENT LOCATION
216
FOUND ?
218
Y
CHECK FOR REVERSE DATA
220
FOUND ?
222
Y
N
END

FIG. 4